


AOM DRIVER




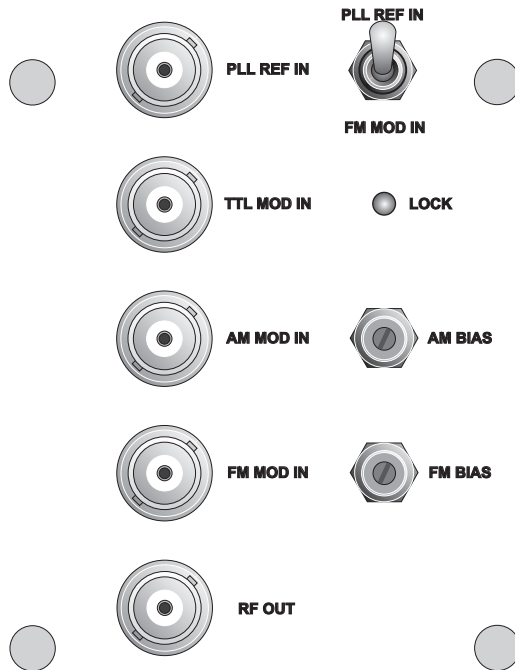


PLL REF IN
PLL REF IN
FM MOD IN
TTL MOD IN
LOCK
AM MOD IN
AM BIAS
FM MOD IN
FM BIAS
RF OUT



PLL REF IN
PLL REF IN
FM MOD IN
TTL MOD IN
LOCK
AM MOD IN
AM BIAS
FM MOD IN
FM BIAS
RF OUT

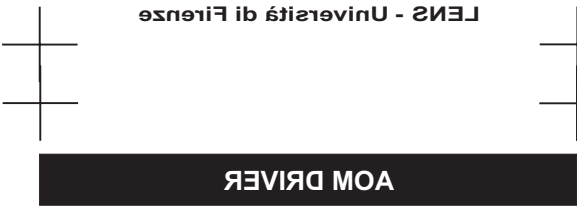

PLL REF IN
PLL REF IN
FM MOD IN
TTL MOD IN
LOCK
AM MOD IN
AM BIAS
FM MOD IN
FM BIAS
RF OUT

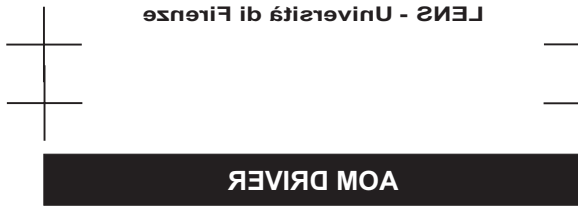

PLL REF IN
PLL REF IN
FM MOD IN
TTL MOD IN
LOCK
AM MOD IN
AM BIAS
FM MOD IN
FM BIAS
RF OUT

