

DUAL FREQUENCY AOM DRIVER

RF OUT
TTL MOD IN
AM MASTER FREQ
AM SLAVE UNLOCK
LOOP OFF
TIG OUT
LOOP ON

DUAL FREQUENCY AOM DRIVER

RF OUT
TTL MOD IN
AM MASTER FREQ
AM SLAVE UNLOCK
LOOP OFF
TIG OUT
LOOP ON

DUAL FREQUENCY AOM DRIVER

RF OUT
TTL MOD IN
AM MASTER FREQ
AM SLAVE UNLOCK
LOOP OFF
TIG OUT
LOOP ON

DUAL FREQUENCY AOM DRIVER

RF OUT
TTL MOD IN
AM MASTER FREQ
AM SLAVE UNLOCK
LOOP OFF
TIG OUT
LOOP ON